



# Series PZ / PW / PZi / PZiG Pulse Metering Pumps

BULLETIN  
PZ-17



CE

Where Innovation Flows

[www.neptune1.com](http://www.neptune1.com)





Features	TYPE ►	MANUAL CONTROL						EXTERNAL INPUT			PROGRAMMABLE INPUTS / OUTPUTS		
		PZ	PZD	PW	PZi4	PZi8	PZiG	PZi4	PZi8	PZiG	PZi4	PZi8	PZiG
Manual control	• PZ Models (Speed only is adjustable from 15 to 300 SPM)	■	—	—	—	—	—	—	—	—	—	—	—
	• PZD/PW/PZi Models (Adjust speed 1 to 300 SPM plus stroke length adjustment <sup>1</sup> )	—	■	■	■	■	■	■	■	■	■	■	■
	• Enter desired flow directly in ml/min.	—	■	■	—	■	■	—	■	■	■	■	■
Calibration function	• Calibrate pump flow to actual condition of chemical, pressure, viscosity, etc.	—	■	—	—	■	■	—	■	■	■	■	■
Control input	• External interlock (Examples: level switch, remote start, reset)	—	—	■	■	■	■	—	■	■	■	■	■
Operation display	• Indicates speed and status	—	—	■	■	■	■	—	■	■	■	■	■
	• Indicates speed, feed rate <sup>2</sup> , status and other operational data	—	—	—	—	■	■	—	■	■	■	■	■
Signal input <sup>3</sup> 4-pin connector	• Pulse signal Frequency-divide 1/1 to 1/9999, Multiply 1 to 9999 (See pg.6)	—	—	PWP <sup>7</sup>	■	■	■	—	■	■	■	■	■
	• Analog signal Shift function, Proportional band function (See page 6)	—	—	PWM	■	■	■	—	■	■	■	■	■
	• pH Control/Residual Chlorine Control (See page 10)	—	—	—	—	—	■	—	—	—	■	■	■
Signal output <sup>4</sup> 8-pin connector	• Alarm output (Level switch, injection monitor <sup>2</sup> )	—	—	■	—	■	■	—	■	■	■	■	■
	• Operation pulse signal (Synchronous pulse output for each stroke)	—	—	■	—	■	■	—	■	■	■	■	■
	• Operation progress signal (Time or number of strokes remaining in program)	—	—	—	—	■	■	—	■	■	■	■	■
Alarms	• Alarm display, output and action (run, pause or stop) can be selected	—	—	8	—	■	■	—	■	■	■	■	■
	• Two point level control (See page 11)	—	—	—	—	■	■	—	■	■	■	■	■
Other functions	• Power supply for flow checker	—	—	—	—	■	■	—	■	■	■	■	■
	• Interval operation (Repeat cycle program, see page 11) ON time: 1 to 999999 minutes / OFF time: 1 to 999999 minutes	—	—	PWT <sup>6</sup>	—	■	■	—	■	■	■	■	■
	• Counter (Countdown batch injection, see page 11) 1 to 9999 strokes (X1, X10, X100, X1000)	—	—	—	—	■	■	—	■	■	■	■	■
	• Head can be turned 90° to allow base to be mounted to a vertical wall <sup>5</sup>	■	—	■	■	■	■	—	■	■	■	■	■

NOTES: 1. PZi4 and PZi8 Models in sizes -32/-52 plus all PZD and PZiG Models: 20-100% stroke length adjustment. PW Models: 50-100% stroke length adjustment.  
2. PZi8 only when used with Flow Checker shown on page 5.  
3. PZi4 has one analog input and one high speed digital pulse input; PZi8 and PZiG have one analog input and two high speed digital pulse inputs. See page 11.  
4. Two separate configurable outputs, either open collector (alarm, error, run) or pulse (operational sync or end of cycle).  
5. Sizes -31/-61/-12 only. 6. Internal Operation: on time 1 to 9,999 minutes; off time 9,999 minutes (Model PWT).  
7. Pulse Signal Frequency: divide 1/1 to 1 to 999; multiply 1 to 999 (Model PWP).  
8. Alarm output with level device or high pressure.

## Model Number Selection

The complete model number consists of three parts: **TYPE + SIZE + MATERIAL CODE**

**TYPE** – Specify **PZ** or **PZD** for manual control; specify **PZi4** or **PW** for external input; specify **PZi8** for programmable models.  
The largest models are the **PZiG** Series, available in full programmable type only.

**SIZE** – Size code selects the capacities per the charts on pages 3 and 4. Sizes **-31**, **-61** and **-12** are available for type PZ and PW.  
Higher capacity sizes **-32** and **-52** are available for type PZD. Types PZi4 and PZi8 are not available in sizes -31, -61 or -12.  
The very high PZiG capacities are shown in a separate chart.

**MATERIAL CODE** – Select from charts on pages 3 and 4.  
**Example** – The complete model for a pump with a Kynar liquid end with Viton seals rated at 160 ml/min capable of accepting a 4-20mA input would be:

Type **PWM** + Size **-61** + Material code **-FTCF**  
The complete model number becomes **PWM-61-FTCF**

## Variety of Liquid End Materials

**Standard Model: PVC ► (VTCF/VTCE)**

- General chemical applications
- Valve seats and O-rings are available in Viton® or EPDM
- Built-in relief valve

**Universal Model: PVDF ► (FTCF/FTCE/FTCT)**

- For most chemicals and highly corrosive chemicals
- Valve seats and O-rings are available in Viton®, EPDM or Teflon®
- Built-in relief valve

**Chlorine Model: Acrylic (CL)**

- Transparent pump head allows visual check of valves
- Reduced head volume and upward sloping ports vent gas away from diaphragm
- Improved pump efficiency for countering gas lock
- Built-in relief valve

**Chlorine Model: Acrylic (ARPZ)**

- CL model with automatic air release mechanism
- Derate capacity 5% for air release models

\*Not available for PW models.

**Stainless Steel Model (SS) ▼**

- For solvents and other chemicals where plastics are not suitable

To specify pump, choose the type from the chart on page 2 plus the size from the chart below (ex: PZi4-32). Then add the appropriate material code from the chart below (ex: PZi4-32-FTCF). Complete instructions regarding Model Number Selection are on page 2.

## Materials Chart: PZ / PW / PZD / PZi4 / PZi8

Adapters for NPT connection are available

MATERIAL CODE	PUMP HEAD	TUBE JOINT	VALVE SEAT	CHECK BALL	DIAPHRAGM	FOOT VALVE & STRAINER	BACKPRESSURE INJECTION ASSEMBLY	SUCTION CONNECTION – TUBE*	DISCHARGE CONNECTION – TUBE*
VTCF	PVC	PVC	Viton	Ceramic	PTFE	PVC	PVC	3/8" Tube – Soft PVC <sup>2</sup>	3/8" Tube – PE <sup>2</sup>
VTCE	PVC	PVC	EPDM	Ceramic	PTFE	PVC	PVC	3/8" Tube – Soft PVC <sup>2</sup>	3/8" Tube – PE <sup>2</sup>
CL <sup>1</sup>	Acrylic	PVC	Viton	Ceramic	PTFE	PVC	PVC	3/8" Tube – Soft PVC	3/8" Tube – PE
ARPZ <sup>1</sup>	Acrylic	PVC	Viton	Ceramic	PTFE	PVC	PVC	3/8" Tube – Soft PVC	3/8" Tube – PE
SS	316SS	N/A	EPDM	316SS	PTFE	Not Included	Not Included	3/8" MNPT – None	3/8" MNPT – None
FTCF <sup>1</sup>	PVDF	PP	Viton	Ceramic	PTFE	PVDF – Molded	PVDF – Molded	3/8" Tube – PE <sup>3</sup>	3/8" Tube – PE
FTCE <sup>1</sup>	PVDF	PP <sup>4</sup>	EPDM	Ceramic	PTFE	PVDF – Molded	PVDF – Molded	3/8" Tube – PE <sup>3</sup>	3/8" Tube – PE <sup>4</sup>
FTCT	PVDF	PVDF	Teflon	Ceramic	PTFE	PVDF – Molded	PVDF – Machined	3/8" Tube – FEP <sup>2,3</sup>	3/8" Tube – FEP <sup>2</sup>

<sup>1</sup> Not available in -32 or -52 size codes. PW not available in ARPZ configuration. \*NOTE: 3/8" Tube is 3/8" OD x 1/4" ID; Adapters for NPT connection are available  
<sup>2</sup> PZ-32 and PZ-52 Models – 18x12 mm Soft PVC Tube for VTCF and VTCE Models; 15x12 mm PTFE Tube for FTCT Models  
<sup>3</sup> Ceramic Weight Included <sup>4</sup> 220 psi Model PZ/PW-31-FTCE – 1/4" Tube Joint and Tube – PP

## Type and Size Selection Chart: PZ / PW / PZD / PZi4 / PZi8

Head can be turned 90° to allow base to be mounted to a vertical wall (-31/-61/-12 only).

MANUAL MODEL	EXTERNAL INPUT MODEL <sup>1</sup>	PROGRAMMABLE MODEL	MAX. CAPACITY GPD	MAX. CAPACITY GPH	MAX. CAPACITY ML/MIN.	MAX. PRES. PSI	DWG./ CURVE	STROKE LENGTH (MM)	MAX. PWR. (VA)	AVG. PWR. (WATTS)
PZ-31-HP <sup>2</sup>	PWM-31-HP/PWP-31-HP/PWT-31-HP		10.5	0.44	28	290	pages 8-9	1.0	200	15
PZ-31	PWM-31 / PWP-31 / PWT-31		12	0.5	30	145	pages 8-9	1.0	200	15
PZ-61	PWM-61 / PWP-61 / PWT-61		24	1.0	60	145	pages 8-9	1.0	250	18
PZ-12	PWM-12 / PWP-12 / PWT-12		38	1.6	100	100	pages 8-9	1.0	250	18
PZD-32	PZi4-32	PZi8-32	137	5.7	360	45	pages 8-9	1.5	500	30
PZD-52	PZi4-52	PZi8-52	204	8.5	540	30	pages 8-9	1.5	500	30

NOTES: <sup>1</sup> PW and PZi4 models provided with terminal strips, not pin connectors.  
<sup>2</sup> PZi8 models include two separate 2-meter cables, one each 4-pin and 8-pin connector end.  
<sup>3</sup> High Pressure models are available as PZ-31, PWM-31, PWP-31 or PWT-31 only; available in FTCE or SS only. Refer to Material Code Chart above.

Type PZD/PZi-32/52 High Capacity Models

PZD Series pumps offer higher capacities. These models feature an extra large keyboard and the injection rate can be entered directly in milliliters per minute.

The injection rate can be set three ways by direct entry of:

- Stroke speed: 1 to 300 spm
- Percentage: 1 to 100%
- Injection rate: ml/min.

High Capacity models are available in material codes VTCE, VTCE, SS and FTCT only. VTCE model is shown.

- **Onboard calibration** measures the actual discharge volume under the exact operating condition of the specific installation and chemical, then stores that value to insure the correct injection rate.

Type PZiG Programmable Large Volume Models

PZiG Models offer capacities typically requiring motor driven pumps. Special models easily handle viscosities of 1000 CPS (up to 4000 CPS at reduced volume). Powerful onboard controls allow proportional flow rate, pH and residual chlorine control by direct analog connection eliminating the PID Controller and Inverter (plus the control panel to house them), that are required by similar sized motor driven pumps.

The injection rate can be set three ways by direct entry of:

- Stroke speed: 1 to 300 spm
- Percentage: 1 to 100%
- Injection rate: ml/min.

- Manual stroke length adjustment 20% to 100%.

Control Functions also include (see pages 10-11):

- **Onboard calibration** measures the actual discharge volume under the exact operating condition of the specific installation and chemical, then stores that value to insure the correct injection rate.
- Multi-pump proportional flow rate injection from a single direct flowmeter signal (pulse/analog).
- Two point level switch control (see page 11).
- Two line LCD screen displays injection rate and/or operational progress.
- Batch injection
- Interval injection
- Proportional control with shift and proportional band function.

Materials Chart: PZiG

MATERIAL CODE	PUMP HEAD	VALVE SEAT	CHECK BALL	DIA-PHRAGM	STRAINER	BACKPRESSURE INJECTION ASSEMBLY	SUCTION/ DISCHARGE CONNECTION
VTCE	PVC	EPDM	Ceramic	Teflon	Not Included	Not Included	1/2" FNPT
VTCE	PVC	Viton	Ceramic	Teflon	Not Included	Not Included	1/2" FNPT
VTCE-V <sup>1</sup>	PVC	Viton	Ceramic	Teflon	Not Included	Not Included	3/4" FNPT
FTCT	PVDF	Teflon	Ceramic	Teflon	Not Included	Not Included	1/2" FNPT
FTCT-A <sup>2</sup>	PVDF	Teflon	Ceramic	Teflon	PVDF	PVDF	15x12 PTFE <sup>2</sup>

<sup>1</sup> High Viscosity Model rated 1000 to 4000 cps. Consult factory for applications greater than 2000 cps.

<sup>2</sup> Only these models include Foot Valve Strainer, Antisiphon Check Valve, plus 15x12 mm Teflon Suction and Discharge Tubing. Tubing rated 75 psi max.

Type and Size Selection Chart: PZiG

PROGRAMMABLE MODEL	MAX. CAPACITY GPD	MAX. CAPACITY GPH	MAX. CAPACITY ML/MIN.	MAX. PRESSURE PSI	DRAWING/ CURVE	STROKE LENGTH (MM)	MAX. POWER (VA)	AVG. POWER (WATTS)
PZiG-300	130	5.4	340	140	pages 8-9	1.5	750	100
PZiG-500	200	8.4	530	100	pages 8-9	1.5	750	100
PZiG-700	288	12.0	760	60	pages 8-9	1.5	750	100
PZiG-1000	380	15.8	1000	45	pages 8-9	1.5	750	100
PZiG-1300	495	20.6	1300	30	pages 8-9	1.5	750	100

Available Only in Programmable Models

(See page 10 for Direct Connection of pH and Residual Chlorine Control Instruments)

- Manual stroke length adjustment 20% to 100%.
- Set points can be easily viewed on the LCD.
- Pump head may be rotated to face in any of the three positions other than where the keypad and display are located.
- Pump head can be decoupled from the controller base for remote mounting.

Included with Each Pump:

Foot Valve Strainer\*

Back Pressure/Check Valve Injector with Quill\*

Suction, Discharge and Air Release Tubing\*

Power Cord with 3-Prong Plug

Signal Cable with Multi-Pin Connectors (provided with PZiG pump models only)

\*except some PZiG models (see page 4)



Material Selection Chart

PUMPING LIQUID (in alphabetical order)	CONCENTRATION	RECOMMENDED TYPE
Acetic acid	50%	VFC/FFC
Acetic acid	concentrated 24°C	FTC
Aluminum sulfate	—	VEC
Amine*	—	SS
Aqueous ammonia	—	VEC
Calcium/Sodium hypochlorite	12%	CL/AR
Caustic soda	—	VEC
Ferric/Ferrous chloride	—	VFC
Ferric/Ferrous sulfate	—	VFC
Hydrochloric acid	10% to conc.	VFC
Hydrogen peroxide	30%	VFC
Nitric acid	10%	VFC
Nitric acid	30% to conc.	FTC
Phosphoric acid	10% to conc.	FTC
Poly-aluminum chloride (PAC)	—	VEC
Potassium permanganate	—	VEC
Sulfuric acid	to 40%	VFC/FFC
Sulfuric acid	concentrated	FTC

\*Boiler compounds with small amounts of Amine – FEC

Caution – All Models

- Ambient temperature: 32 to 104°F (0 to 40°C)  
Pumped liquids:  
Temperature: 32 to 104°F (0 to 40°C),  
Viscosity: 100 CPS max. except as noted
- This pump is designed for outdoor use. Avoid installing pump in a location where service life could be shortened (i.e., where it is exposed to direct sunlight or driving rain).
- This pump cannot pump liquids containing a slurry.
- A relief valve should be installed on the discharge side, if the pump does not have a built-in relief valve and the discharge piping has a shutoff valve.

Feed Verification Model FC-1 Flow Checker

The Model FC-1 Flow Checker output provides vital information for water treatment programs requiring feed verification to manage chemistry and monitor drum inventory.

- The flow checker mounts directly to the discharge of PZ, PWM, PWP and PWT metering pumps.
- The flow checker is an oval gear flow meter which measures the pump output and transmits one pulse for each 1 ml of flow.
- Connect the flow checker output to your controller or PLC (external power supply required).

Dimensions inches (mm)

Flow Checker Selection Chart

MODEL NO.	MATERIAL	USE w/ PUMP MODEL†
FC-1P-P-N1	Ryton*	PZ or PZi-31
FC-1N-P-N1	Noryl**	PZ or PZi-31
FC-1P-P-N2	Ryton*	PZ or PZi-61 or -12
FC-1N-P-N2	Noryl**	PZ or PZi-61 or -12

† Not available for larger models.

Liquid-End Materials

PART NAME	MODEL FC-1P-□	MODEL FC-1N-□
Body	Ryton*	Noryl**
Ball Check	Ceramic	Ceramic
Ball Guide/Joint	PVC	PVC
Valve Seat/O-Ring	EPDM	Fluororubber

\* Ryton: PPS —Polyphenylene-sulfide (for general chemicals)  
\*\* Noryl: PPO —Polyphenylene-oxide (for sodium hypochlorite)

Specifications


Pulse constant	1mL/pulse
Accuracy	±3% (Depends on nature of chemical, flow rate, temperature and back pressure.)
Normal operating pressure	140 psi (10 Kg/cm²)
Momentary maximum operating pressure	200 psi (14 Kg/cm²)
Temperature	32–104°F (0–40°C) (Liquid should not freeze.)
Liquid viscosity	1 to 50 cps
Output	Open collector (Collector capacity: 30V, 30mA)
Power requirement	4.5 to 25VDC (20mA Max.)*

Green LED lights for each pulse output. Red LED on when the power is ON.

NOTES: 1. Use flow checker only for clear liquids.  
2. Pressure loss is 0.5 Kg/cm² (at maximum flow rate using water).  
\* + 5V Power Supply provided on board PZi8 Models.




(shown with PZ type pump)

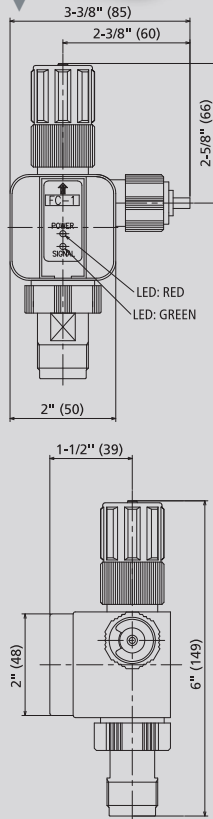





# External Dimensions


Dimensions are shown in inches (mm).

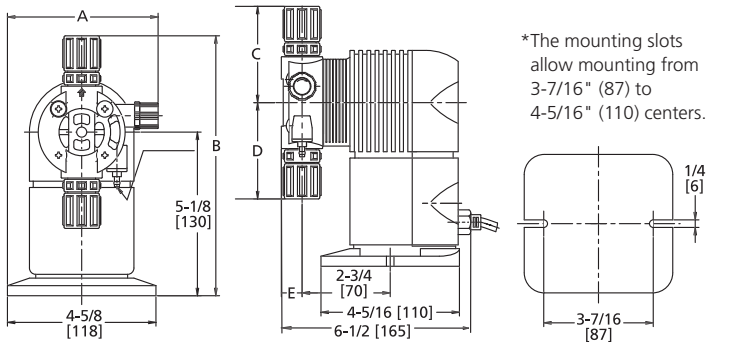

\*The mounting slots allow mounting from 3-7/16" (87) to 4-5/16" (110) centers.

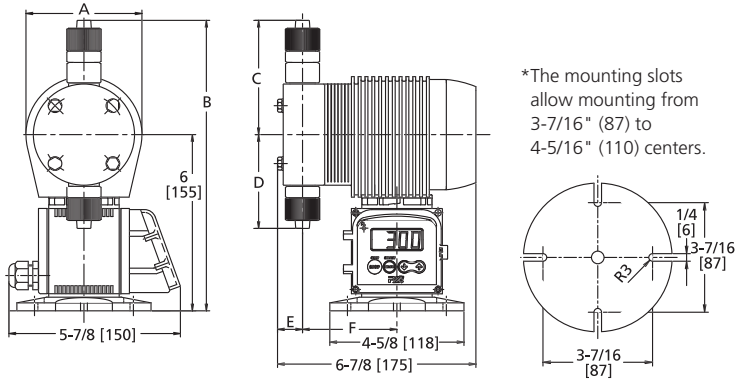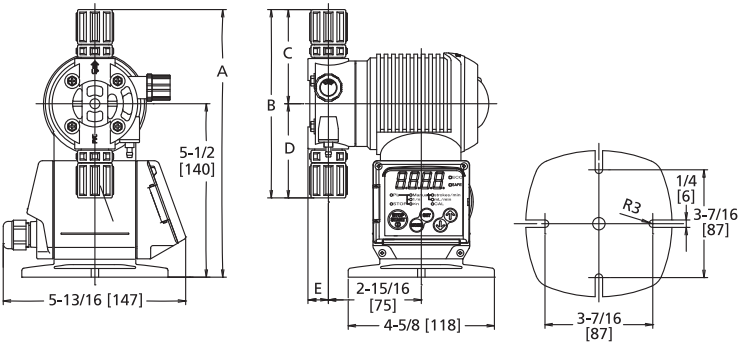

\*The mounting slots allow mounting from 3-7/16" (87) to 4-5/16" (110) centers.

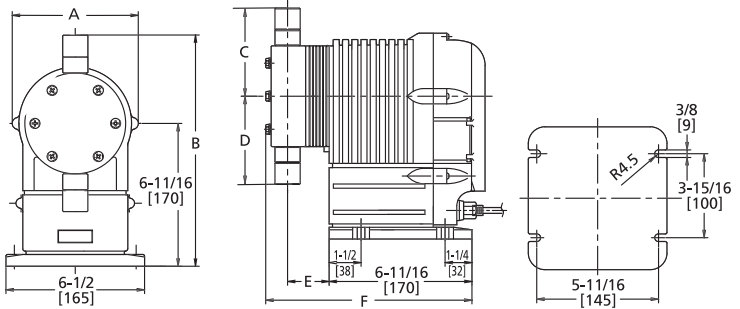

MODELS PZ					
MATERIAL	A	B	C	D	E
VTCE/VTCE	4 3/4 (120)	8 1/2 (206)	3 (76)	3 (76)	1 1/8 (17)
FTCE/FTCE/FTCT	4 3/4 (120)	9 (228)	3 3/8 (98)	3 3/8 (98)	1 1/8 (17)
CL	3 1/4 (83)	8 (204)	2 1/2 (73)	3 (76)	1 1/4 (32)
ARPZ	3 1/4 (83)	8 (204)	2 1/2 (73)	3 (76)	2 1/4 (57)
SS	3 1/4 (83)	7 3/4 (194)	2 1/2 (64)	2 1/2 (64)	3/4 (19)

MODELS PW-31/61/12					
MATERIAL	A	B	C	D	E
VTCE/VTCE	8 1/2 (216)	6 (152)	3 (76)	3 (76)	3/4 (16.5)
FTCE/FTCE/FTCT	9 1/4 (237)	7 3/4 (195)	3 3/8 (98)	3 3/8 (98)	3/4 (16.5)

\*The shape and dimensions differ slightly depending on the liquid-end material and connection type.


MODELS PZD/PZi-32/52						
MATERIAL	A	B	C	D	E	F
VTCE/VTCE	4 (102)	9 3/4 (244)	3 1/2 (88)	3 1/2 (88)	1 (25)	3 3/8 (86)
FTCT	4 (102)	10 1/4 (256)	4 (101)	3 3/4 (83)	3/4 (22)	3 3/4 (83)
SS	4 (102)	9 (227)	3 3/4 (83)	2 1/2 (72)	1 (24)	3 3/8 (89)

MODELS PZiG-300/500/700/1000/1300						
MATERIAL	A	B*	C*	D*	E	F
VTCE & VTCE						
300/500	5 3/8 (150)	10 3/4 (270)	4 (100)	4 (100)	2 (50)	9 3/4 (247)
700	5 3/8 (150)	10 3/4 (260)	3 3/8 (90)	3 3/8 (90)	2 (50)	9 3/4 (247)
1000/1300	5 3/8 (150)	10 3/4 (265)	3 3/8 (95)	3 3/8 (95)	2 1/4 (54)	10 (253)
FTCT						
300/500	5 3/8 (150)	11 1/4 (285)	4 1/2 (115)	3 3/8 (97)	2 (50)	9 3/4 (247)
700	5 3/8 (150)	11 1/4 (285)	4 1/2 (115)	3 3/8 (97)	2 (50)	9 3/4 (247)
1000/1300	5 3/8 (150)	11 1/4 (298)	5 (128)	5 (128)	2 1/4 (54)	10 (253)

\*For high viscosity liquid end type VTCE-V (all sizes):  
B = 11 1/4 (294) C = 4 3/4 (124) D = 4 3/4 (124)

## Pump Head Cross Sectional View


Cross Sectional view applies to PVC, Kynar and Type CL Heads; does not apply to Material Codes ARPZ, SS or any PZiG Liquid Heads. Some models use single check balls.

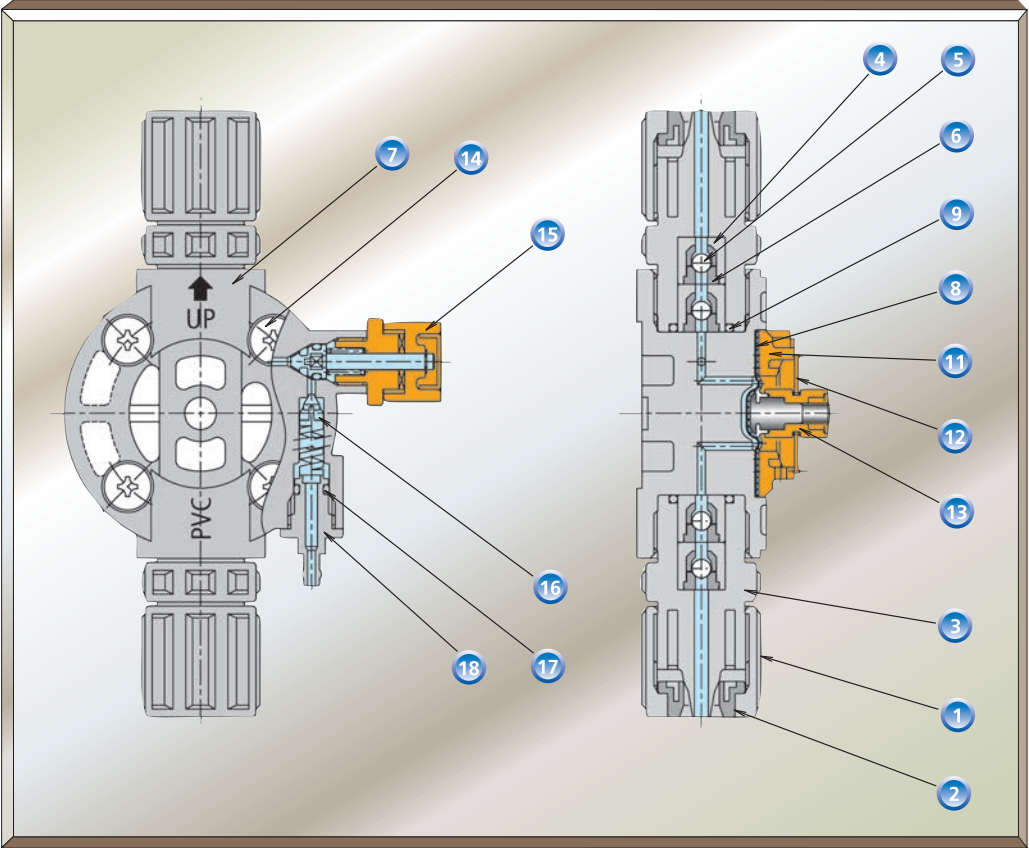

- 1 Hose Nut
- 2 Retaining ring
- 3 Hose joint
- 4 Ball guide
- 5 Check ball
- 6 Valve seat
- 7 Pump head
- 8 Diaphragm
- 9 O-ring
- 11 Support ring
- 12 Protective diaphragm
- 13 Spacer
- 14 Truss screw
- 15 Relief valve
- 16 Air release valve
- 17 O-ring
- 18 Air release nozzle

## Performance Curves

Conditions: Clean water, Room temperature

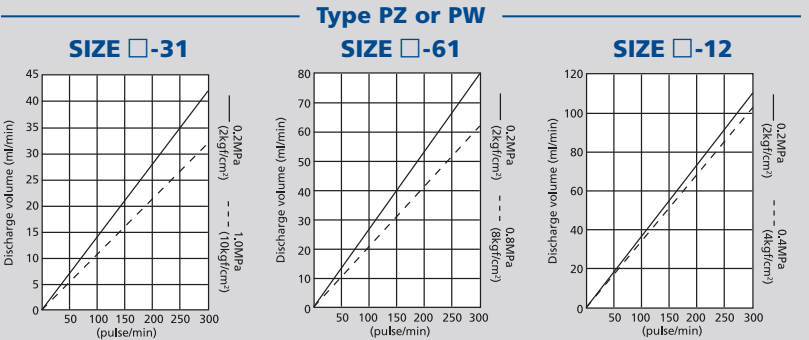

# Programmable Models PZi8 and PZiG Control System Examples


## Your System is Enhanced by Outstanding Controllability

### Proportional Flow Rate Control – Models PZi8 & PZiG

#### Advantage

Flow meter signals are received directly according to the flow rate of the main piping and the discharge volume is automatically controlled. This eliminates the need for control devices, which have been needed up until now, and reduces the cost of devices.  
**Cost benefits:** Digital panel meters, PID controllers and inverters are no longer required.

Example: Any additive injected proportional to flow in a line

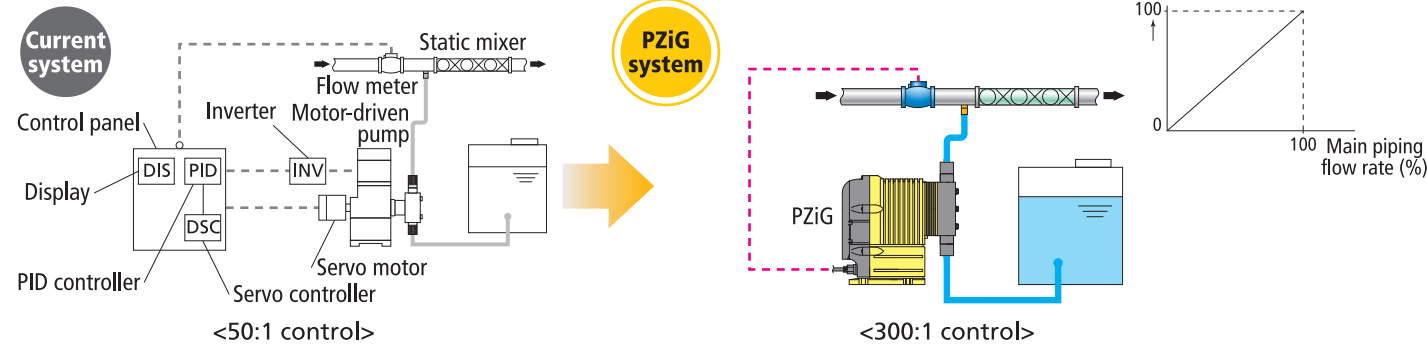


### pH Control – Model PZiG only

#### Advantage

Control signals from the pH meter are received and chemicals are automatically injected according to the preset pH value. This simplifies the configuration of the control devices.  
**Cost benefits:** Two PID controllers and two inverters are no longer required.

Example: On-site pH control

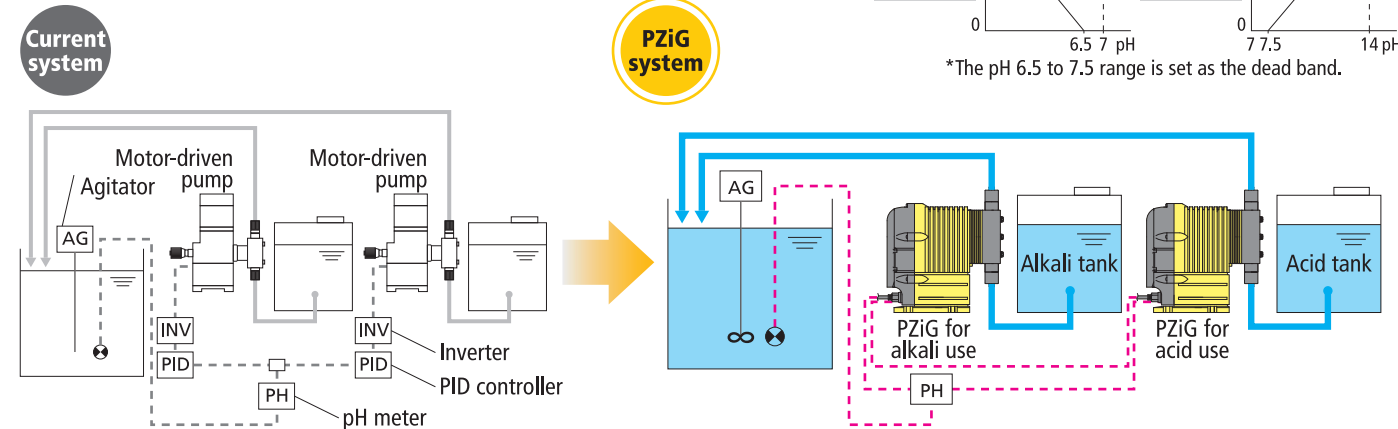


### Sterilization – Model PZiG only

#### Advantage

Automatic control is possible on the pump unit merely by receiving signals directly from the residual chlorine meter and setting the target residual chlorine value.  
**Cost benefits:** Control panels (PID controllers and inverters) are no longer required.


Example: Disinfection using electrolytic sodium hypochlorite in swimming pools

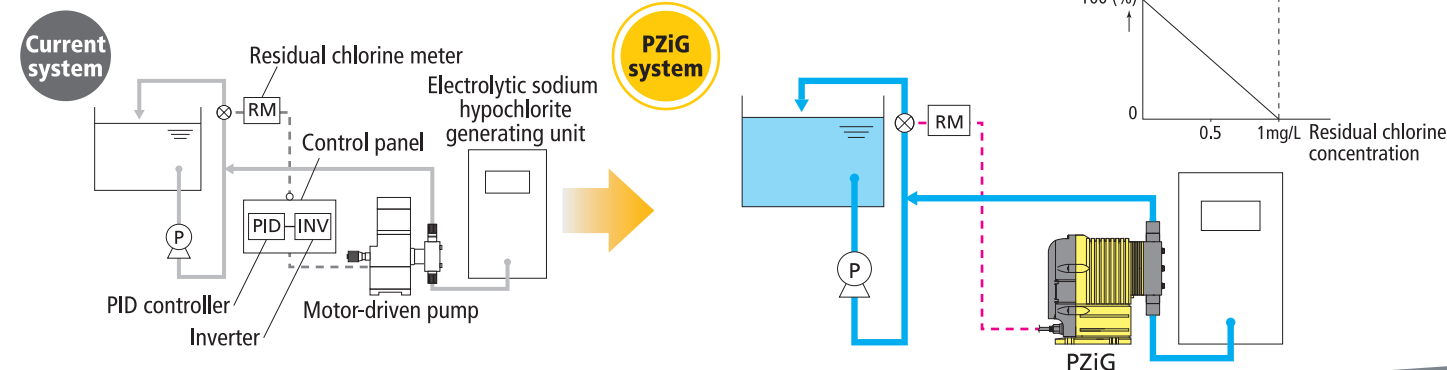

### Multi-liquid Proportional Flow Rate Injection – Models PZi8\* & PZiG

#### Advantage

Multiple PZiGs inject different chemicals according to preset values while calculating the signal from a single flow meter. This eliminates the need for a signal distributor.

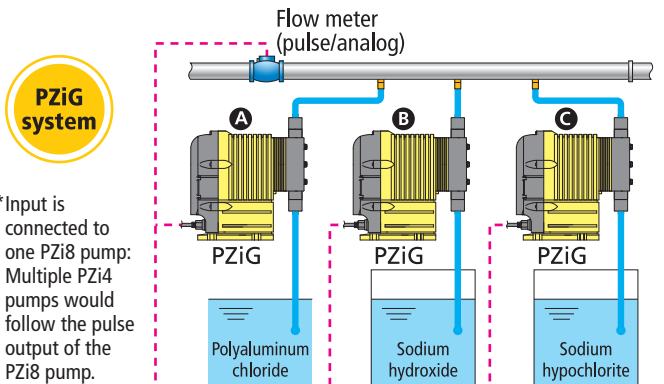


#### Note:

Multiple PZiG pumps take pulse or analog signal directly: A single PZi8 pump would take a pulse or analog signal directly and slave a second or third pump to its output.

### Batch Injection (counter)\* – Models PZi8 & PZiG

#### Advantage


Pump operation starts on command signal. Operation automatically stops and operator is notified of completion when a preset count is reached. Maximum number of pulses 9999x1, x10, x100 or x1000 (555 hours max. run time).\*\*

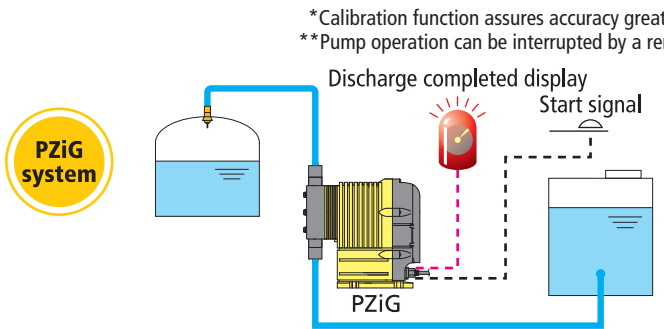

### 2-point Level Switch-based Control – Models PZi8 & PZiG

#### Advantage

A 2-point level control enables output of an alarm at the liquid level "low limit" and stops pump operation at the "low-low limit."

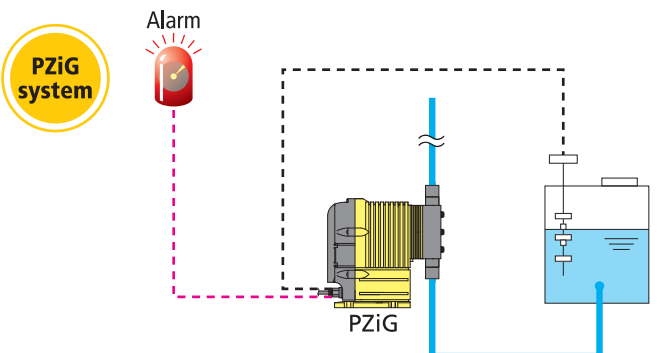

### Interval Injection (repeat cycle)\* – Models PZi8 & PZiG

#### Advantage

The pump is repeatedly started and stopped by a preset timed program. ON time and OFF interval can be easily set from 1 to 9999 minutes respectively.\*\*

### CONTROL VARIATIONS – Models PZi8 & PZiG


Basic specifications	Adjustment range	Stroke speed	1~300 spm (1 spm step)
		Stroke length adjustment	20~100%*
	Number of inputs	Analog input 4~20 mADC (110 ohm)	1
		Digital input high speed (125 Hz max.) Open collector	2
		Digital input low speed (10 Hz max.) Open collector	2
Run mode	Other	Power supply output +5VDC (10 mA max.)	1
	LCD display	Display unit selection (% , mL , spm)	
	Manual operation	Manual mode	
		Analog mode	Analog signal 4~20 mADC
	Automatic operation	Pulse signal	1/1~1/9999
		Pulse signal	1 to 9999 times
		Count mode	Number of strokes 1~9999 (x1, 10, 100, 1000)
		Interval mode	ON/OFF time 1 to 9999 mins / 1 to 9999 mins

\*50~100% for sizes -31/-61/-12

Inputs	Control input	Stop input
		Level switch input
		Alarm reset input
Outputs	Control output	Start/reset input
		Operation signal output
		Operation sync pulse output <sup>1</sup>
	Alarm output	End signal output <sup>2</sup>
		Analog input error alarm <sup>3</sup>
		Input pulse buffer overflow alarm <sup>3</sup>

1. Output in sync with solenoid operation.
2. Output when operation for preset count is completed.
3. Alarm display, alarm output and pump operation can be selected in response to an alarm condition.

# Quality Accessories by Neptune

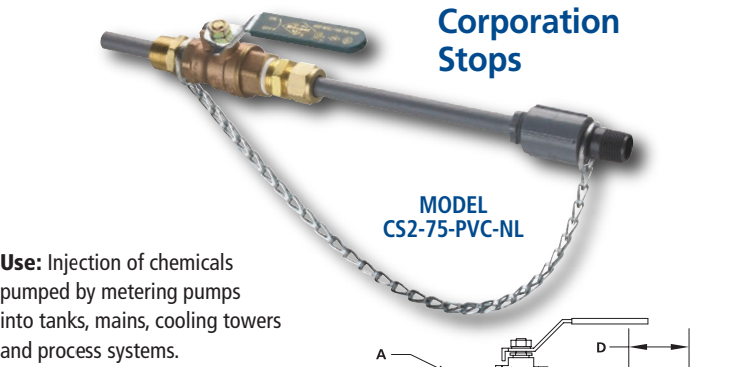

**Use:** Injection of chemicals pumped by metering pumps into tanks, mains, cooling towers and process systems.

Request Bulletin CS

MODEL	MATERIAL OF CONST.	SIZE (A)	DIMENSIONS		
			B	C	D
CS2-75-PVC-NL	CPVC	¾" NPT	7¼"	5¼"	2"
CS2-100-PVC-NL	CPVC	1" NPT	7¼"	6¼"	1½"

Kynar, 316SS and C-20 also available.

## Portable Mini-Tank Feeders

Mini-tank system offers portability and economy. Compact 23½" wide, 36" long, 29" high size fits through doorways, in elevators and allows installation in small areas. Tank removes from base for ease of transport and handling.

- Total weight: 40 lbs. plus pump
- Use with electronic or motor driven pumps
- 8" manway standard

Request

Bulletin FDP/CFS

MODEL MT-30



MODEL	DESCRIPTION
MT-30	30 Gallon System includes polypropylene suction piping with isolation valve and "Y" strainer (pump not included)
MT-30T	30 Gallon Molded Tank and Base Only
OPTIONS AND ACCESSORIES	
MT-CC	Calibration Column
MT-CT	Containment Basin
MTA	1/20 HP Mixer

## Polyethylene Solution Tanks and Agitators For PZ Series Pumps (Top Mounted)

- Self Supporting
- For Corrosive or Non-Corrosive Solutions
- Molded cover will accept "PZ" Series Pumps and Neptune Economy Agitators
- 30 or 50 Gallon Sizes

### TANKS

MODEL	SIZE	HEIGHT	DIA. MAX.	WEIGHT
ST-30	30 Gal.	23"	22"	19 lbs.
ST-50	50 Gal.	32½"	22"	20 lbs.



MODEL ST-50

### AGITATORS — PVC suction tubing protector pipe included

MODEL	DESCRIPTION	WEIGHT
AN-316-30	316SS shaft and propeller, fits 30-gallon polyethylene tank; 19" long shaft	14 lbs.
AN-316-50	316SS shaft and propeller, fits 50-gallon polyethylene tank; 29" long shaft	14 lbs.
AN-E-30	Epoxy-coated shaft and impeller, fits 30-gallon polyethylene tank; 19" long shaft	14 lbs.
AN-E-50	Epoxy-coated shaft and impeller, fits 50-gallon polyethylene tank; 29" long shaft	14 lbs.

## Nimble Skid Flexible Pump Packages

Nimble Skids offer a complete chemical feed system ready for use with bulk or semi bulk tanks.

Standardized design with a menu of options allows design flexibility and rapid delivery at an affordable cost. Controls and Automation are available.

Request

Bulletin FDP/CFS



Specifications and dimensions for the products in this bulletin are subject to change without notice.



PSG  
295 DeKalb Pike  
North Wales, PA 19454 USA  
P: +1 (215) 699-8700 • F: +1 (215) 699-0370  
[neptune1.com](http://neptune1.com)



Distributed By: